
How to remove the battery cover (AB11)


Name of each part · https://manual.amnimo.com/en/docs/name-of-each-part-en/how-to-remove-the-battery-cover/

Insert the supplied tool into the lower left corner of the main unit.

Lower left corner of the body

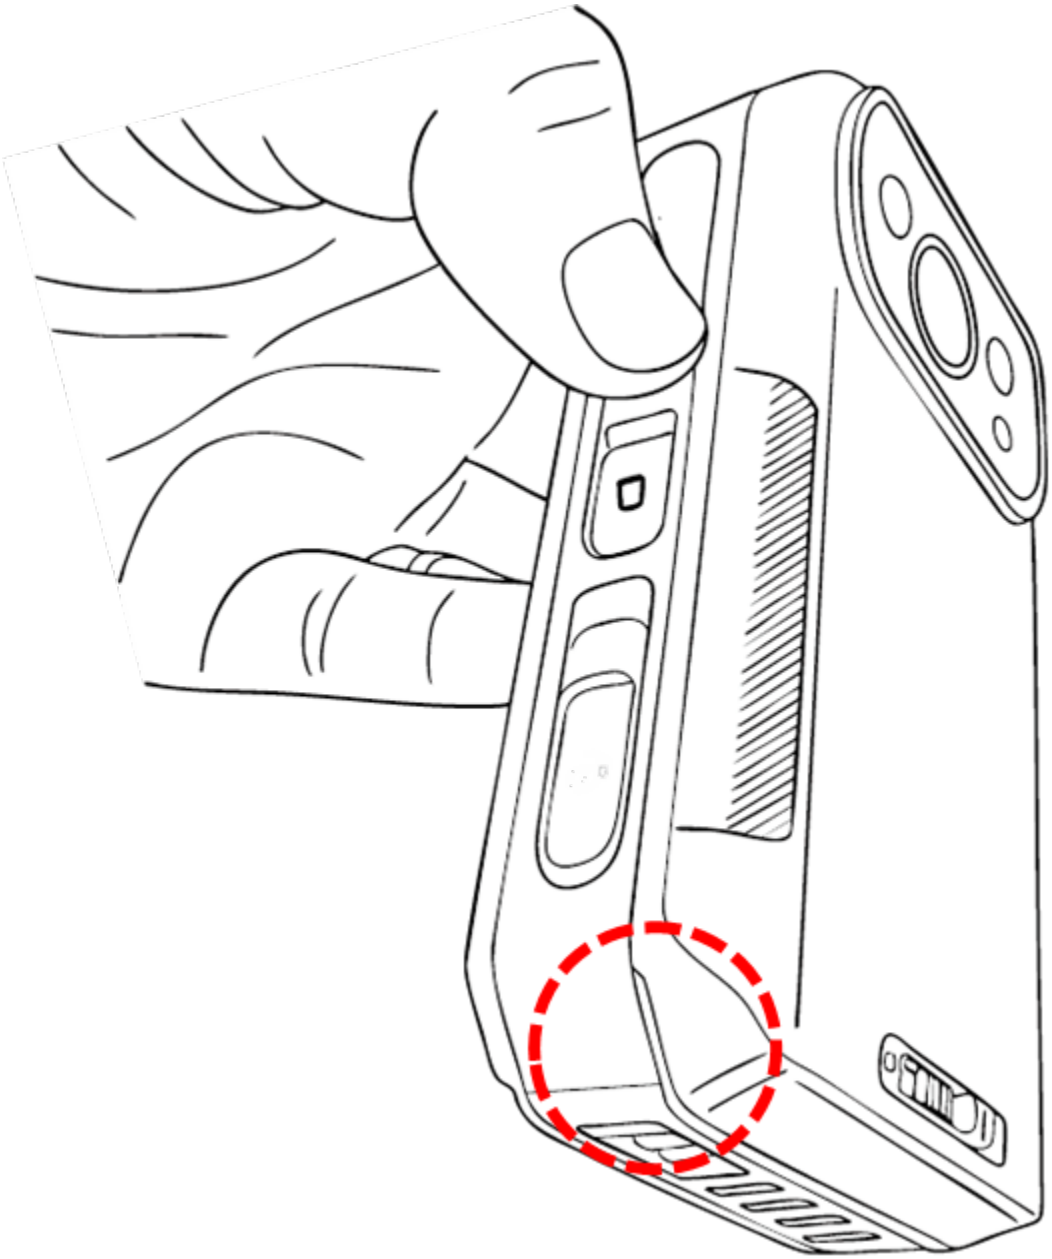


Insert the supplied tool into the position indicated by the red circle and twist gently to the left and right.

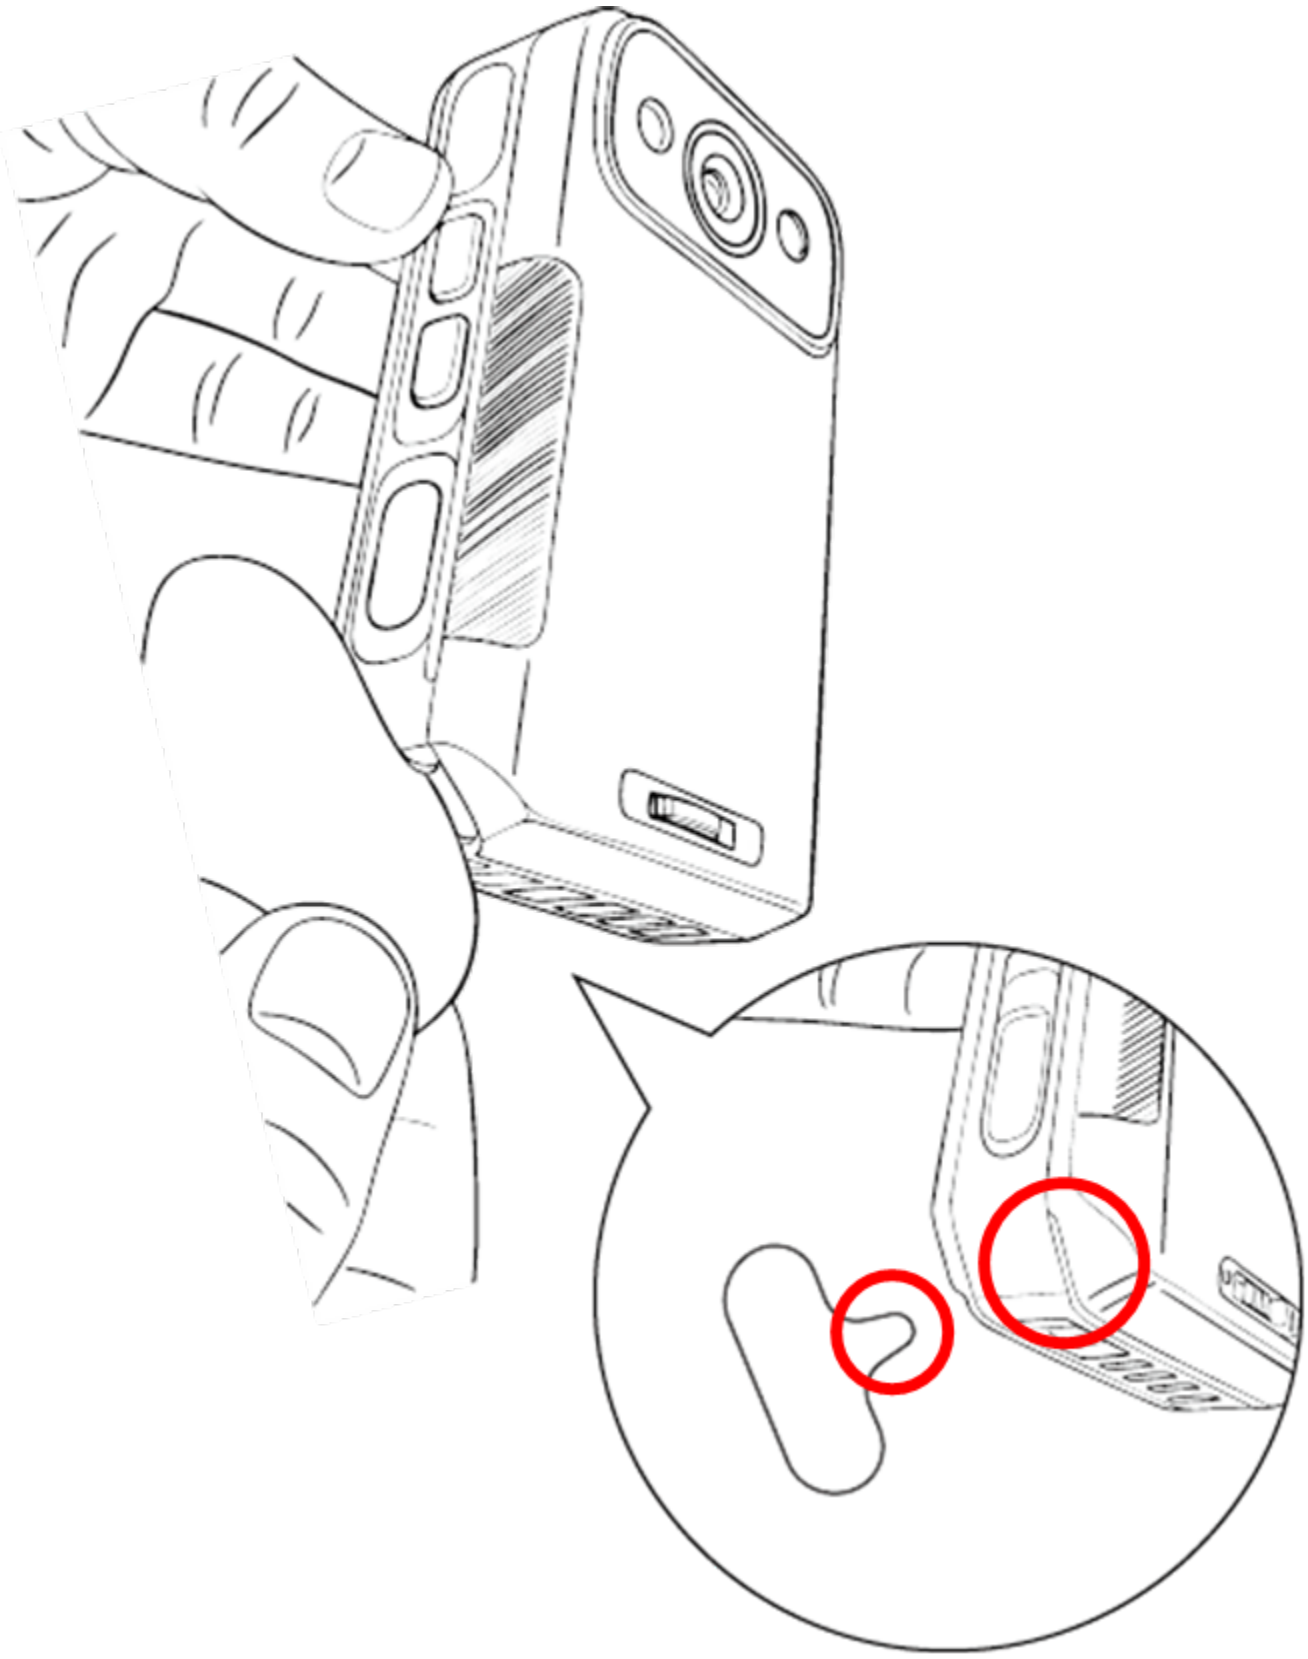


The top cover of the main unit is removed.

The battery is located under the rubber sheet.

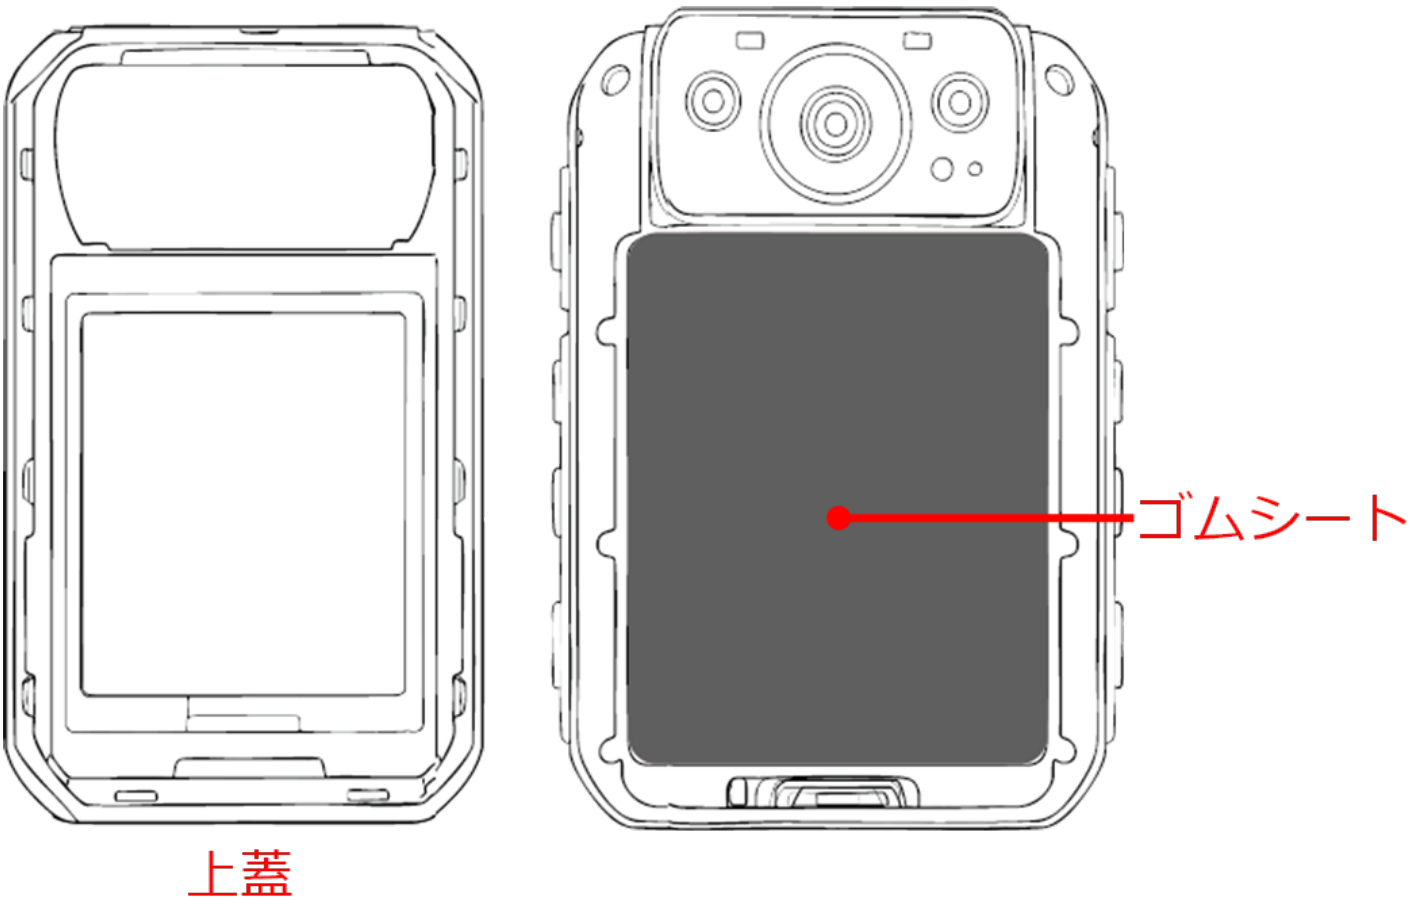

Turn up the rubber sheet and you will find the battery.

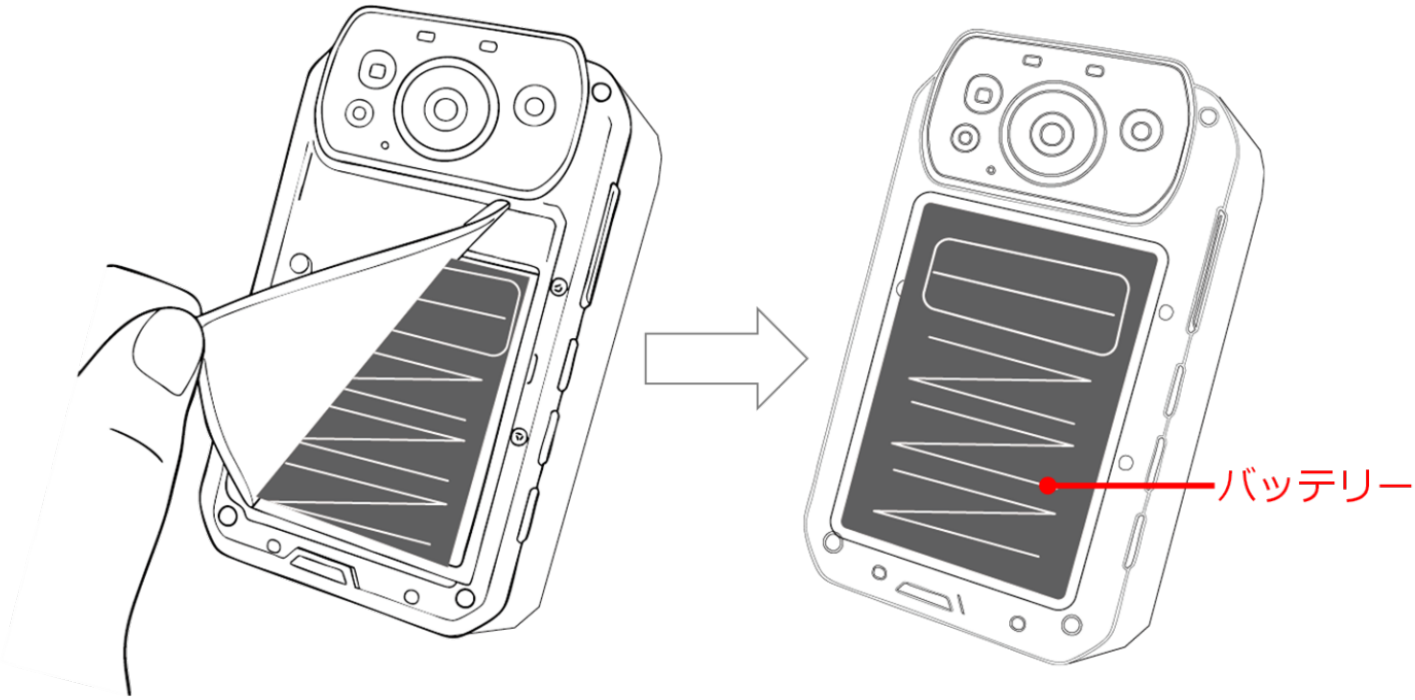
バッテリー