Playback of video wall screen

The video wall screen can be paused and paged through. This section describes the operation of the video wall screen.

The video wall screen has the following control buttons



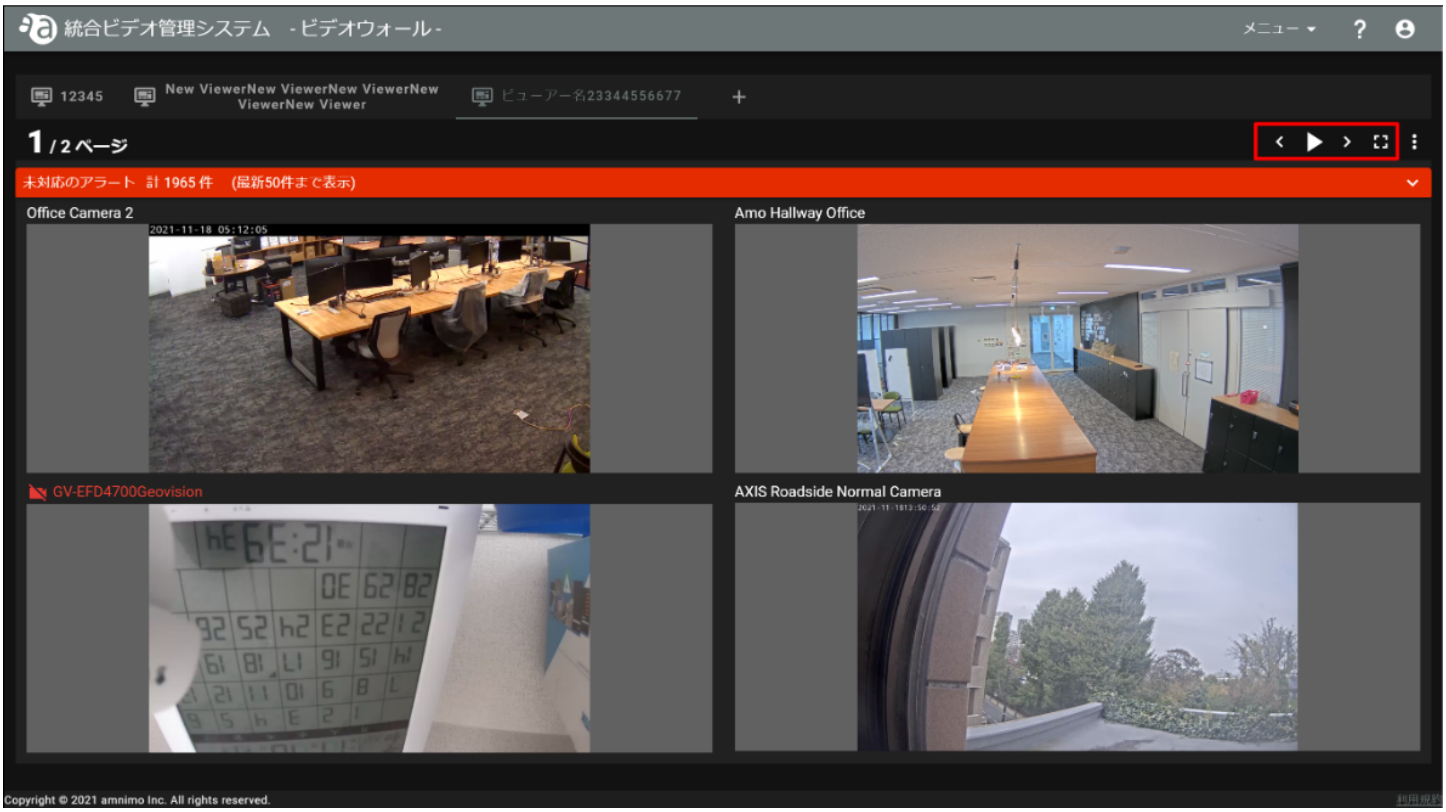
: Pause (appears during playback) : Play (appears during pause)

: Return to previous page

: Advance to next page

: Full screen (press F11 or ESC key to return to original size)

Example: Pause is pressed.


統合ビデオ管理システム -ビデオウォール-
メニュー
12345
New ViewerNew ViewerNew ViewerNew ViewerNew Viewer
ビューアー名23344556677
1 / 2 ページ
未対応のアラート 計 1965 件 (最新50件まで表示)
Office Camera 2
2021-11-18 05:12:05
Amo Hallway Office
GV-EFD4700Geovision
AXIS Roadside Normal Camera
Copyright © 2021 amnimo Inc. All rights reserved.