
Configure PPP (PPPoE) settings

Advanced Settings · https://manual.amnimo.com/en/docs/advanced-settings/configure-ppp-pppoe-settings/

This section describes how to add, edit, and delete new PPP (PPPoE) settings.

Display a list of PPP (PPPoE) settings


From the side menu, click Advanced Configuration and Control - PPP (PPPoE) Settings.

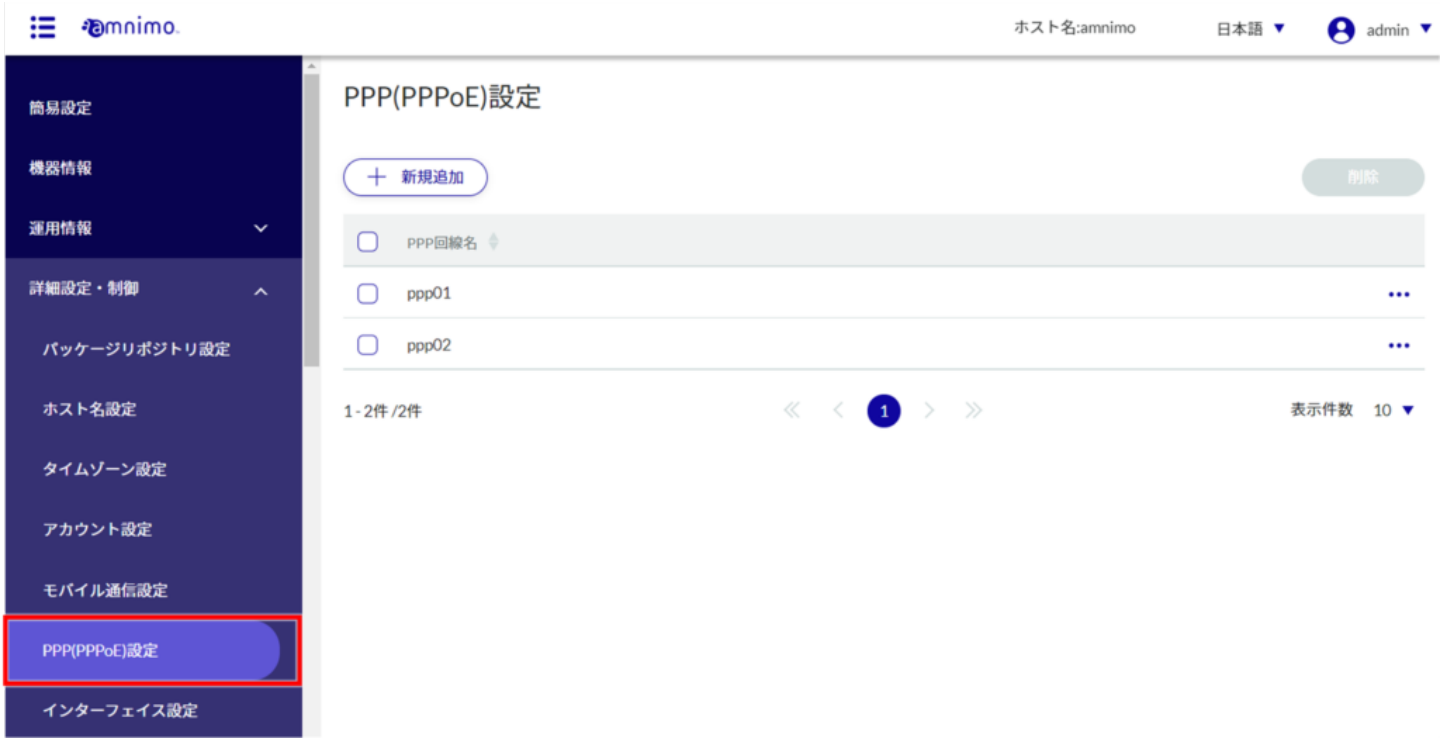

A list of registered PPP (PPPoE) settings will appear on the "PPP (PPPoE) Settings" screen.

NOTE

You can sort PPP (PPPoE) settings by PPP line name in descending/ascending order by clicking the "PPP Line Name" tab in the PPP (PPPoE) settings list.

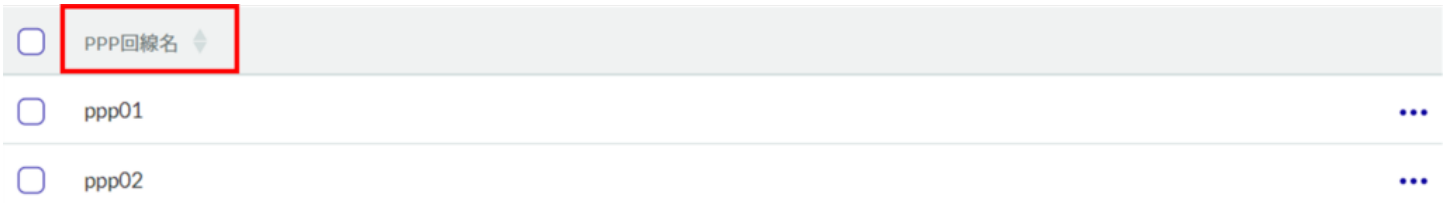

Add PPP (PPPoE) settings

On the "PPP (PPPoE) Settings" screen, click the [Add New] button.



The "Add PPP (PPPoE) Settings" window will appear.


Set the following items (1) to (4) and click the [Setup] button.

❶ Enter the PPP line name.


❷ Select the message output level.

❸ Select the authentication method.

❹ Set a user name and password.

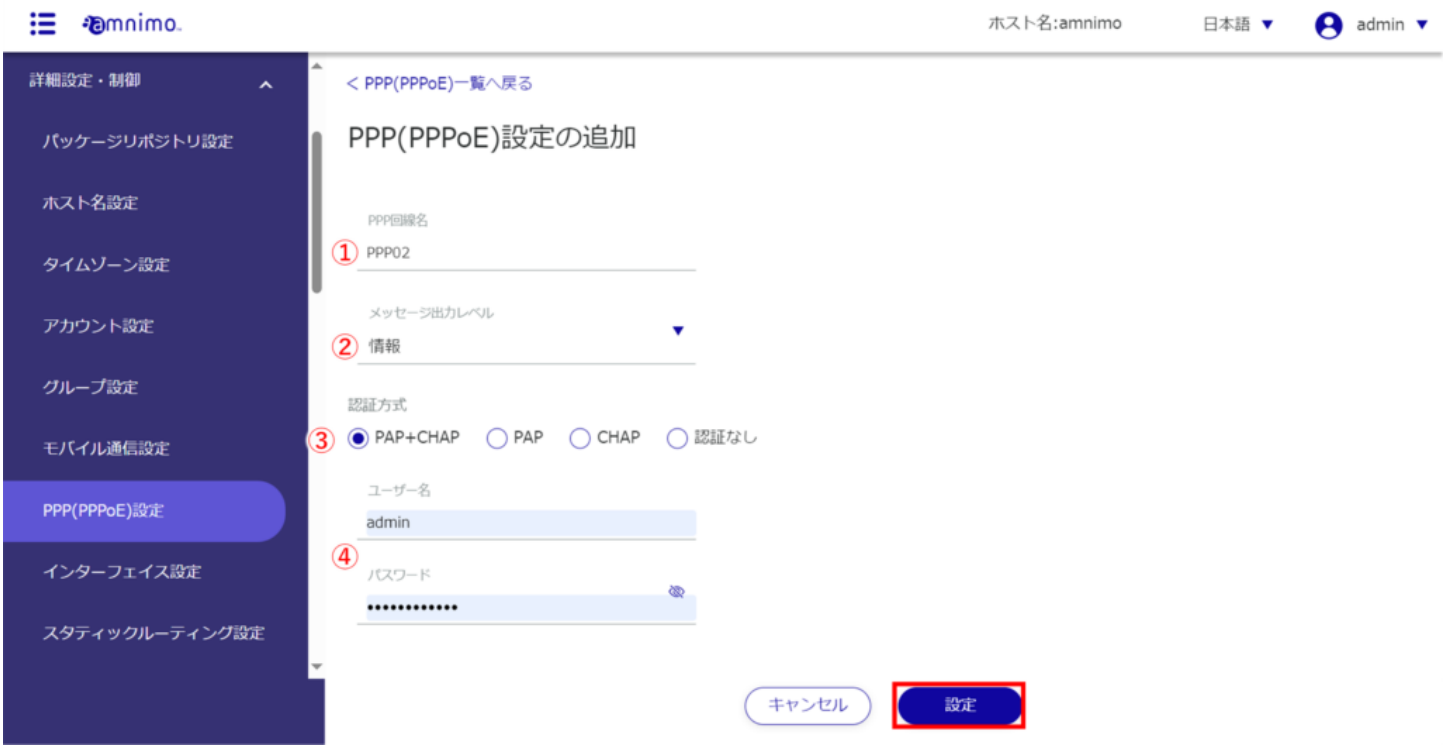

PPP (PPPoE) settings will be added.

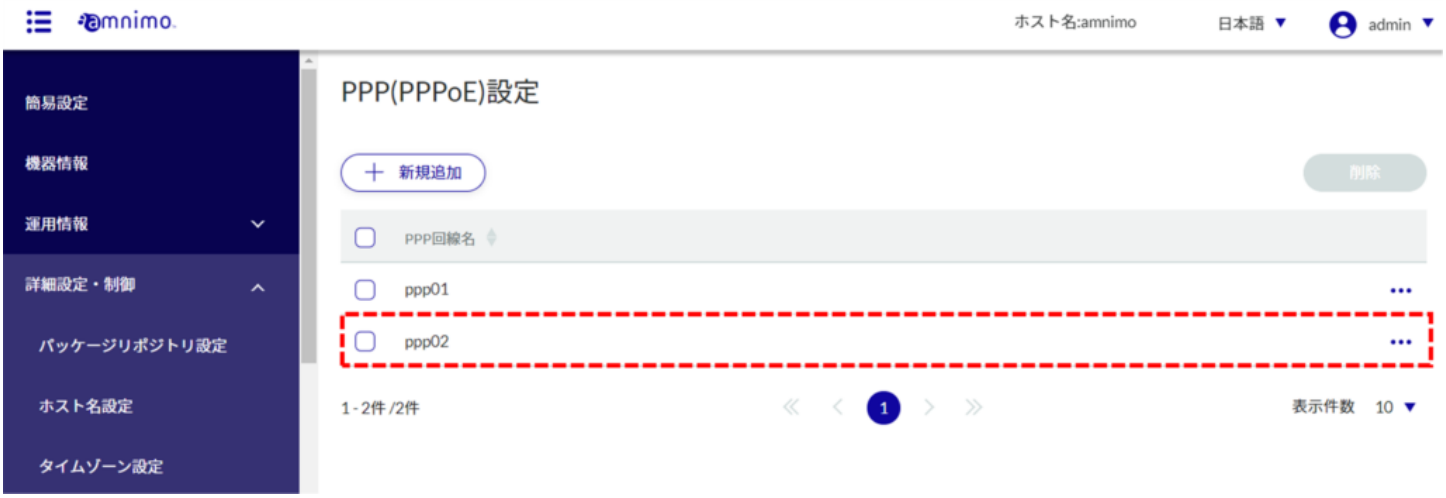

Edit PPP (PPPoE) settings

Edit the registered PPP (PPPoE) settings.

On the "PPP (PPPoE) Settings" screen, click [...] to the right of the PPP (PPPoE) setting you wish to edit and select [Edit] from the operation menu that appears.



The "Edit PPP (PPPoE) Settings" window appears.

Edit the PPP (PPPoE) settings and click the Configure button.



Information on PPP (PPPoE) settings will be updated and the list will be displayed.

Delete PPP (PPPoE) settings

To delete registered PPP (PPPoE) settings, you can either delete them individually from the operation menu, or you can delete them after selecting all PPP (PPPoE) settings you wish to delete.


Delete PPP (PPPoE) settings individually

On the "PPP (PPPoE) Settings" screen, click [...] to the right of the PPP (PPPoE) setting you wish to delete and select [Delete] from the operation menu that appears.



The "Confirmation" screen appears.

Click the [Delete] button.

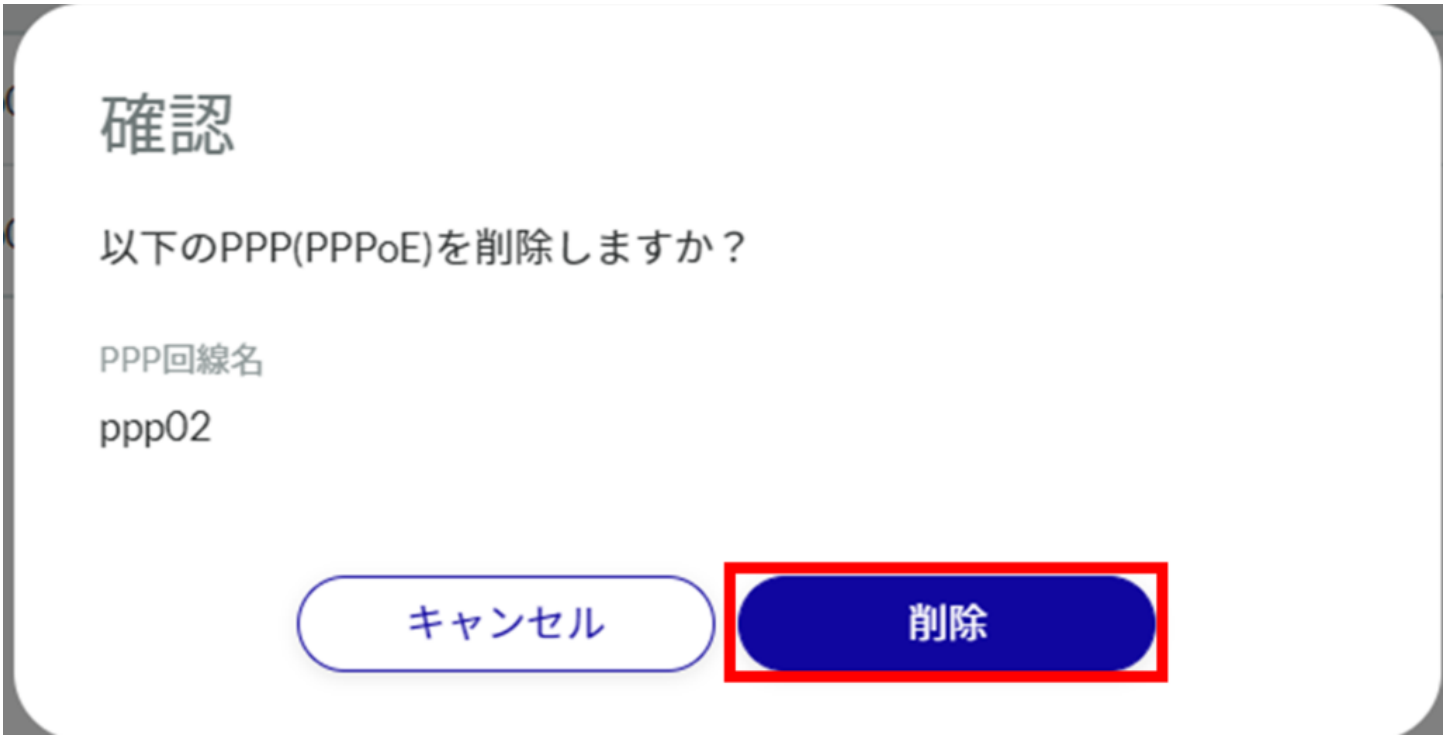

PPP (PPPoE) settings are deleted.

Select and delete multiple PPP (PPPoE) settings


Select the PPP (PPPoE) settings you wish to delete. This is useful for deleting multiple settings at once, or you can select a single PPP (PPPoE) setting to delete.

On the "PPP (PPPoE) Settings" screen, click the checkbox to the left of the PPP (PPPoE) setting you wish to delete to place a checkmark in the box, then click the [Delete] button.



The "Confirmation" screen appears.

Click the [Delete] button.

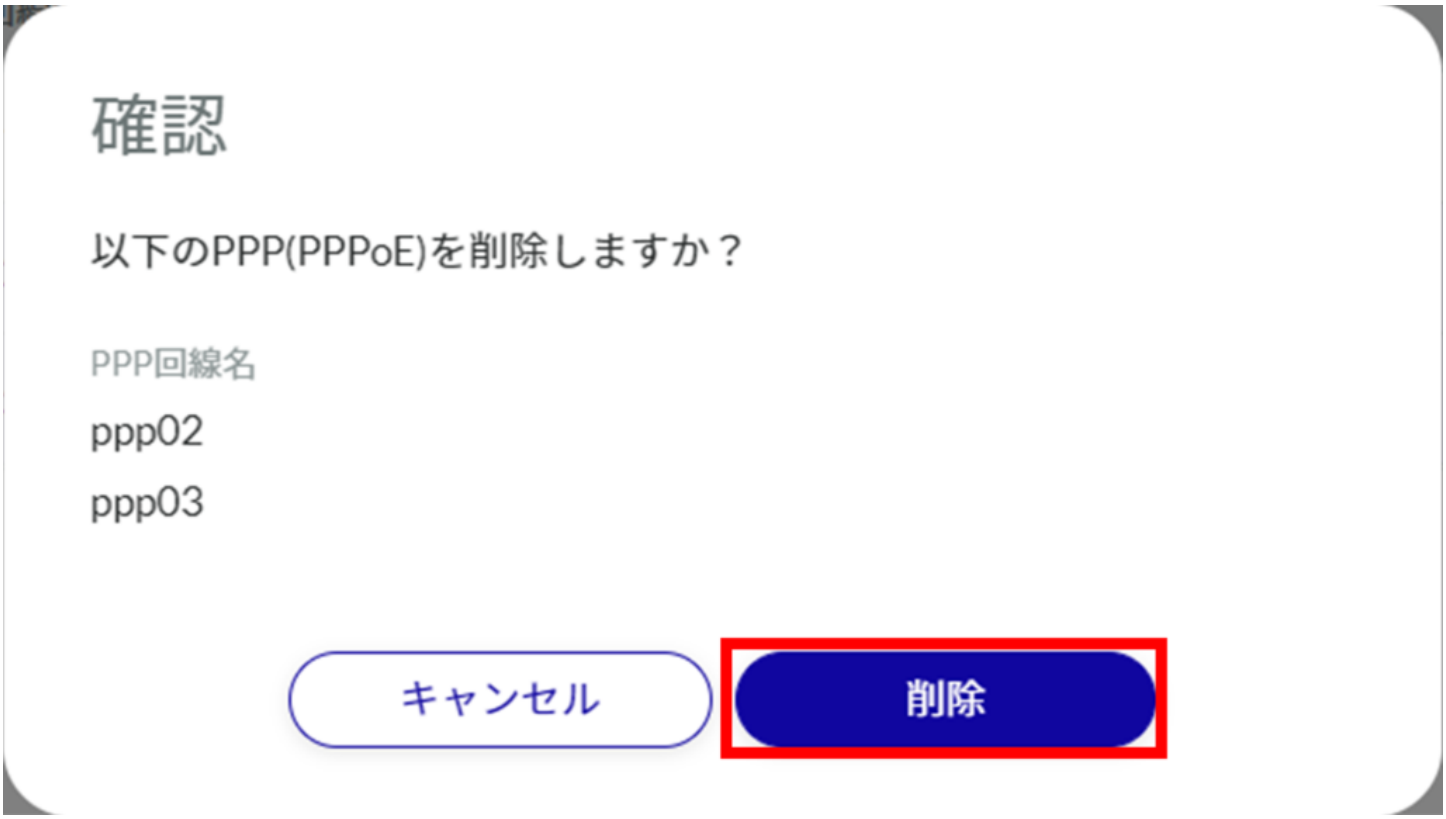

The selected PPP (PPPoE) setting is deleted.