Configure static routing settings.

Advanced Settings · https://manual.amnimo.com/en/docs/advanced-settings/configure-static-routing-settings/

Configure static routing settings for this product.

Display a list of static routing settings

Displays a list of static routing settings.

Click on Advanced Configuration and Control - Static Routing Settings in the side menu.
A list of registered static routing settings is displayed on the "Static Routing Settings" screen.



NOTE

By clicking tabs such as "Routing Name" and "Destination Network Address" in the static routing settings list, you can sort the static routing settings in descending/ascending order for each item.



Add static routing configuration

Add static routing configuration.

On the "Static Routing Configuration" screen, click the [Add New] button.



The "Add Static Routing Configuration" screen appears.

Set the following items (1) to (5), then click the [Setup] button.

❶ Enter a routing name.

❷ Specify the destination network address and prefix length.

❸ Specify the gateway address.

❹ Select the interface.

❺ Set the metric.



Static routing configuration is added.



Edit static routing configuration

Edit the registered static routing settings.

On the "Static Routing Settings" screen, click [...] to the right of the static routing setting you wish to edit and select [Edit] from the operation menu that appears.



The "Edit Static Routing Settings" screen appears.

Edit the static routing settings and click the Configure button.



The static routing configuration information is updated and the list is displayed.

Delete static routing configuration

To delete registered static routing settings, you can either delete them individually from the operation menu of static routing settings, or you can delete them after selecting all static routing settings you wish to delete.

Delete individual static routing configurations


This method is to select Delete from the operation menu of the static routing configuration.

On the "Static Routing Settings" screen, click [...] to the right of the static routing setting you wish to delete and select [Delete] from the operation menu that appears.



The "Confirmation" screen appears.

Click the [Delete] button.

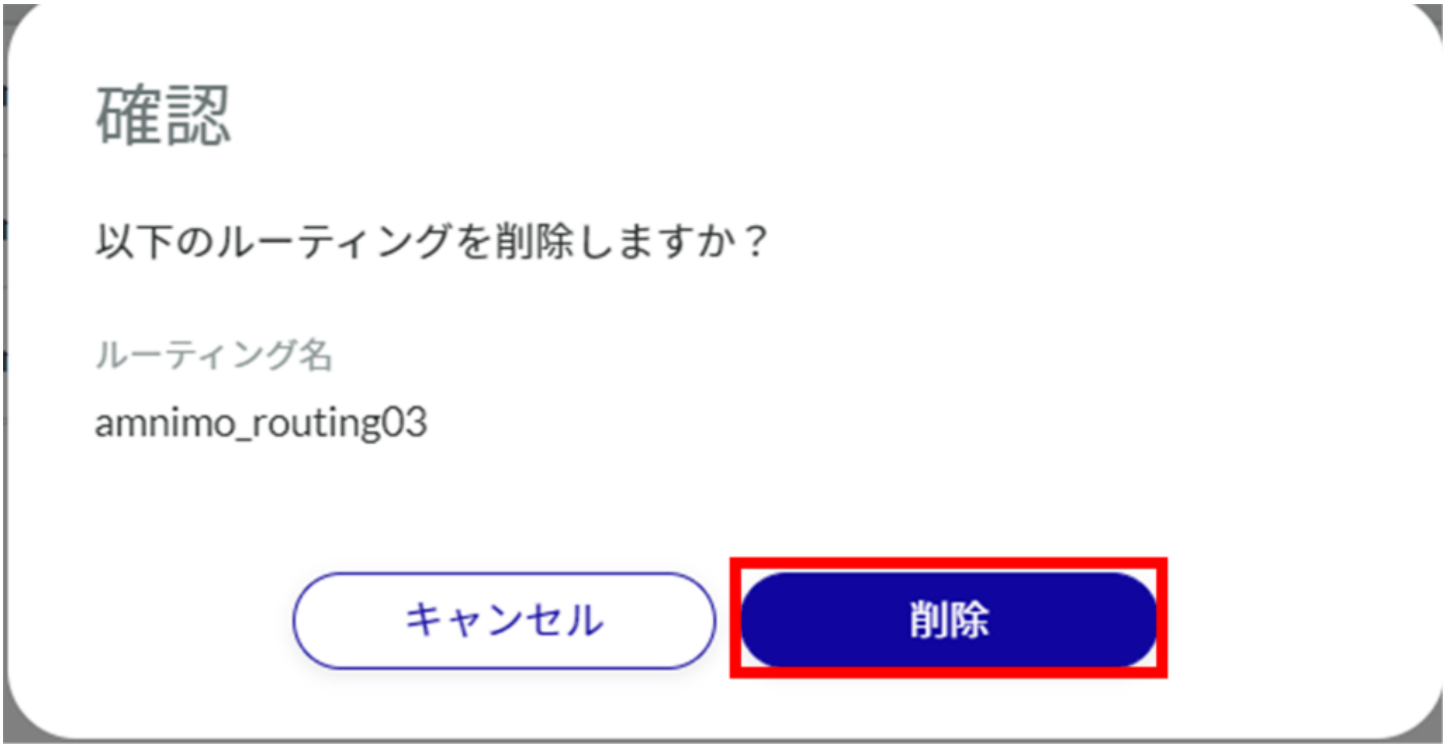

The static routing configuration is deleted.

Selecting and deleting multiple static routing configurations


This method is used to check the static routing settings to be deleted before deleting them. This is useful for deleting multiple static routing settings at once. You can also select a single static routing setting to delete.

On the "Static Routing Settings" screen, click the checkbox to the left of the static routing setting you wish to delete, place a checkmark in the checkbox, and click the [Delete] button.



The "Confirmation" screen appears.

Click the [Delete] button.

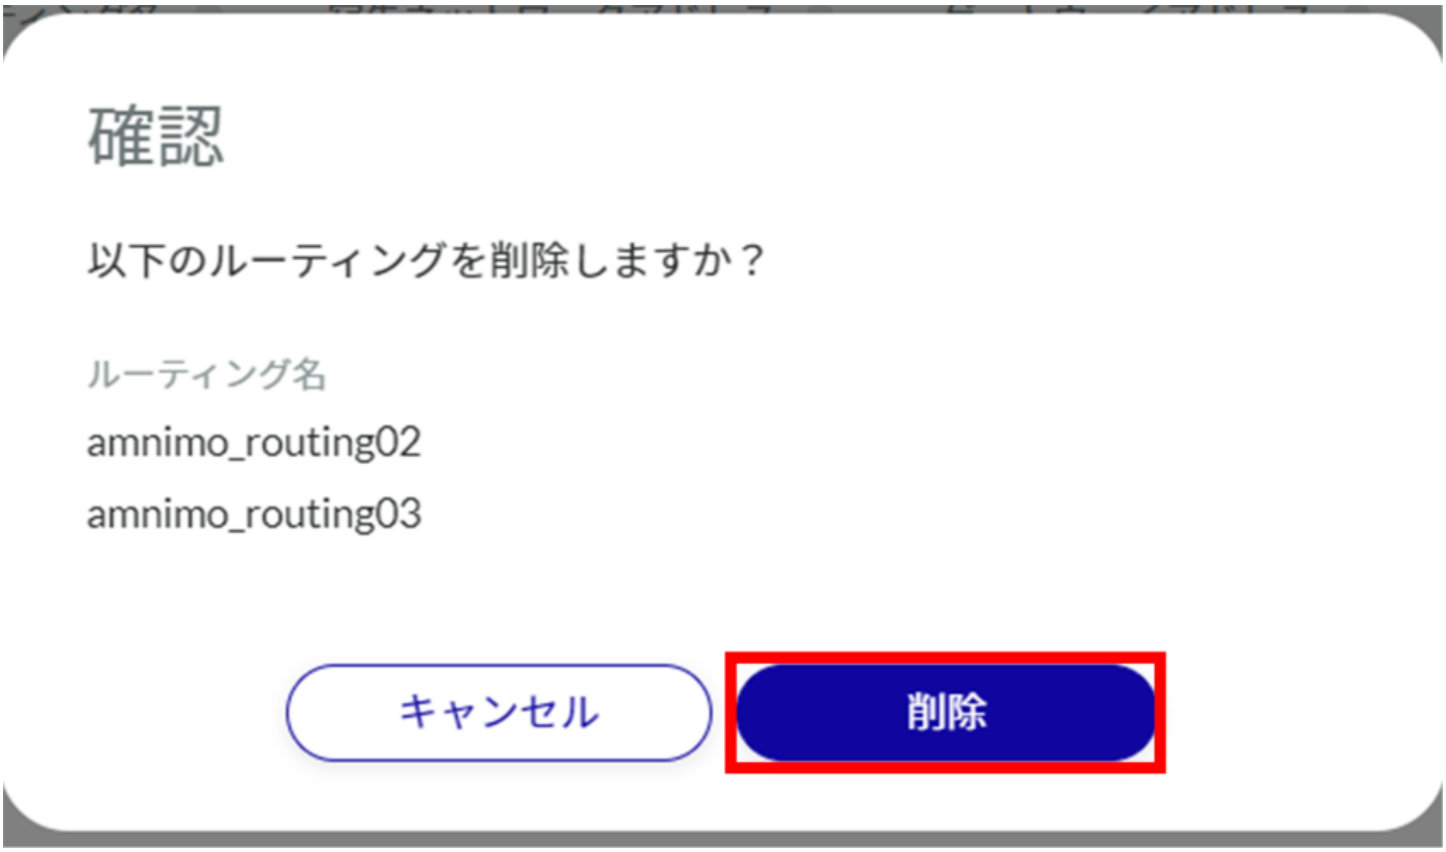

The selected static routing configuration is deleted.