Restart or stop the product

Basic operation · https://manual.amnimo.com/en/docs/basic-operation-en-3/restart-or-stop-the-product/

In addition to shutdown, the product offers two reboot menus: software reboot, which stops the system, and hardware reboot, which does not stop the system.

- Shutdown

  Shut down the hardware power supply.
- Software reboot

  Restart the system after shutting it down.
- Hardware reboot

  Turns off and restarts the hardware power supply without shutting down the system.

Restart the product

Restart the product.

Click Restart/Stop on the side menu.
The "Restart/Stop" screen appears.




Check "Software reboot" or "Hardware reboot" as the reboot method and click "Run".



A "confirmation" screen for restart will appear.

Click the [Execute] button.

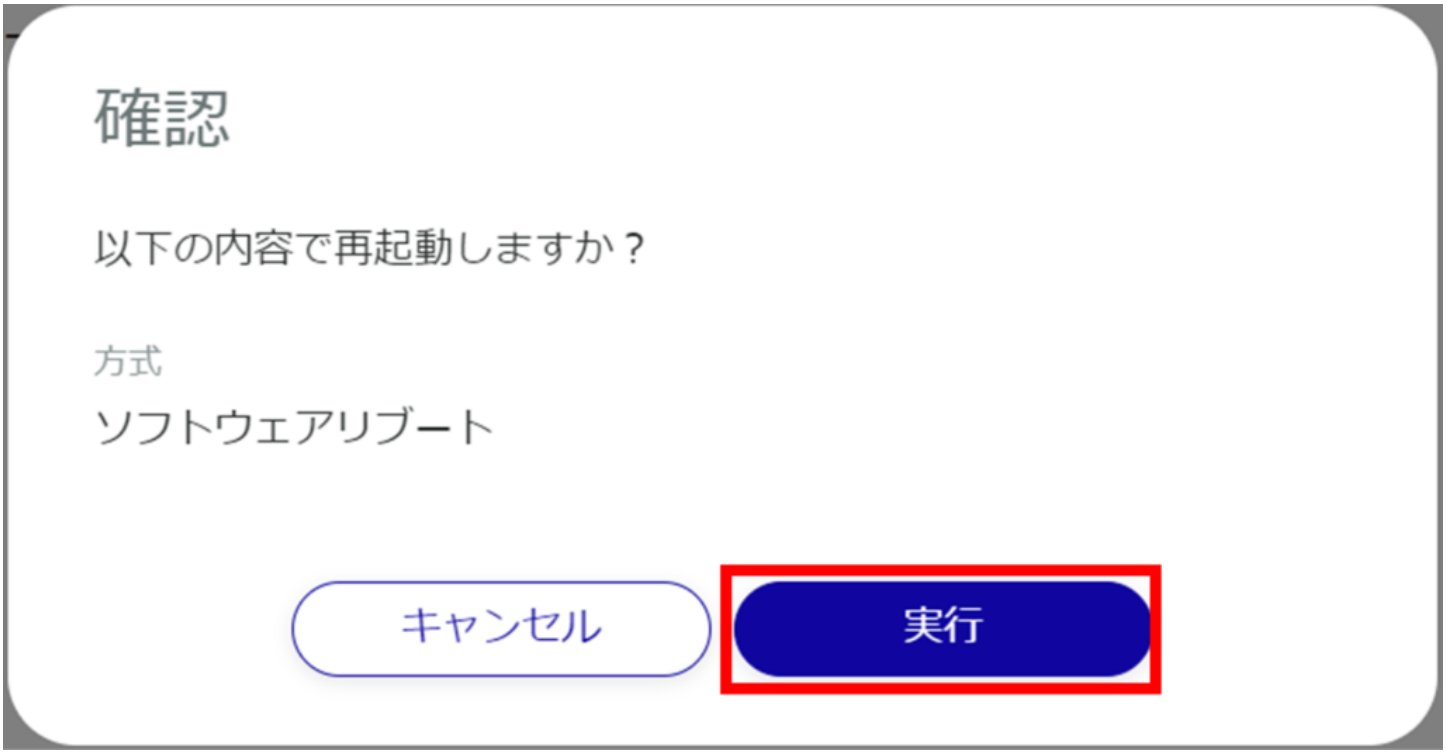

A restart of the product is initiated.

Rebooting takes a few minutes.

After the restart is complete, the "Sign In" screen will appear.

Shut down the product

Shut down the product.

Click Restart/Stop on the side menu.

The "Restart/Stop" screen appears.



To stop, check Shutdown and click Execute.



A shutdown "confirmation" screen will appear.

Click the [Execute] button.



Shutdown of the product is initiated.