Internal wiring and wiring treatment

IoT Router Outdoor Type · https://manual.amnimo.com/en/docs/iot-router-outdoor-type/internal-wiring-and-wiring-treatment-2/

necessities

Cable ties for fixing cables (Please use your own cable ties.)

Wire connection example

Since cables are not fixed when using PF Suga, the following procedure can be used to fix cables to prevent stress on connectors and terminal blocks.

The bar fittings for fixing cable clamps shown below are provided so that they can be fixed through the cable ties.

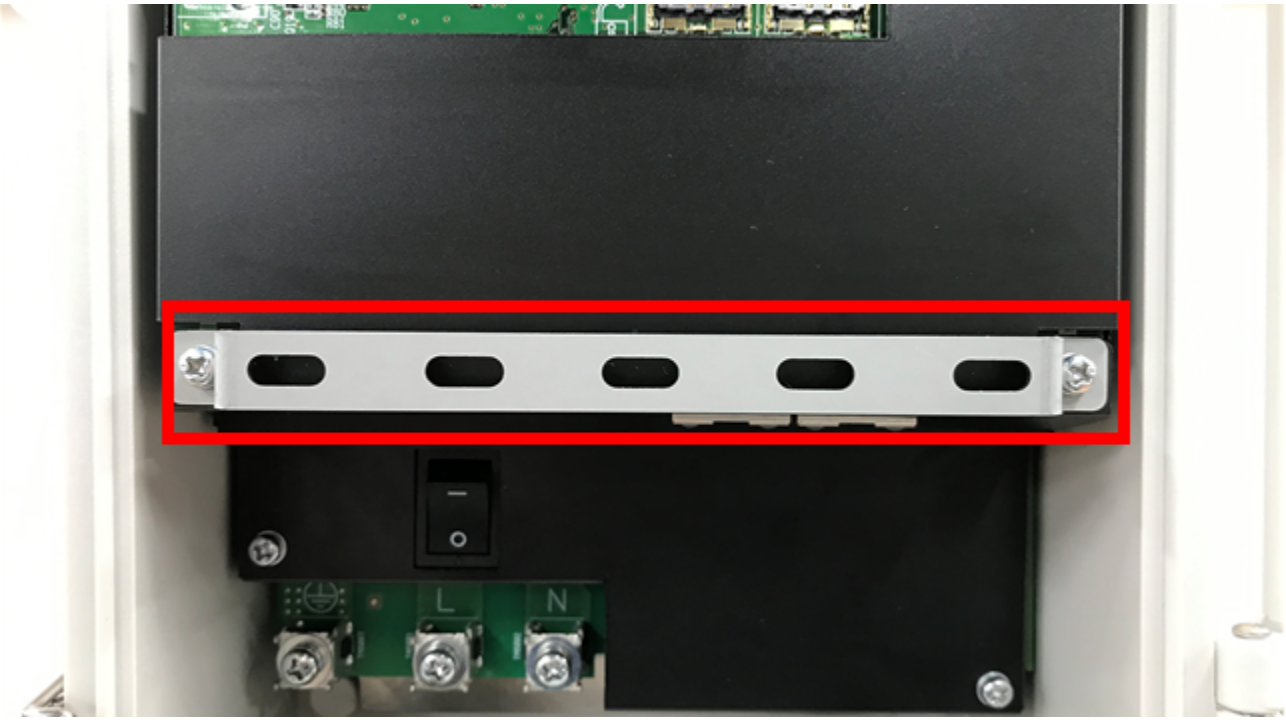

Connect the power and LAN cables and adjust their lengths with cable clamps.


PWR
ANT
MOB
ST
SIM0
SIM1
L
N